

[illegible]

- Compatible Model
 

	GN Mode. 25-49
	GN Mode. 50-65



Last update: Aug 2020

## Nikon Cameras

●	Compatible Model
○	Incompatible Model
—	No information available. To be confirmed.

\*1 Extremely underexposure (about -2EV) appear when Air 1 mounted on D5 to control wirelessly the slave flash and the flash light does not hit the subject directly, such as bouncing or diffusing,

\*2 In D4 - D4s, when manual flash is set, when you shoot continuously and rapidly manually in the Q mode · 1 sheet shooting mode, emission may be missing. Please understand that it is based on specifications.



\*3 At the time of FP flash, it may be underexposed by about 1 stage compared with the genuine strobe

\*4 SD Mode not supported

\*5 Commander / Flash unit may be freeze when camera turn on the electronic shutter mode with mirror up mode. If Commander / Flash unit freezes, remove and re-insert the battery. Turn off the in-compatible function of camera then power on Commander / Flash unit again.

\*6 A firmware update may required in the future.

- Compatible Model

	Air R's GN Mode. 25-49
	Air R's GN Mode. 50-65

\*5 FP/HSS high speed sync function not supported

<div><div><div>Nissin</div><div>DIGITAL</div></div></div>		Compatibility Chart																																								Last update: Aug 2020															
Sony Cameras																																																									
	α9 -	α7S Mark II	α7S	α7R Mark IV -	α7R Mark III	α7R Mark II	α7R -	α7 Mark III -	α7 Mark II	α7	α6500 -	α6400 -	α6300	α6000	α3000	NEX-7	NEX-6	α99 Mark II -	α99	α77 Mark II	α77	α65	α58	α57	α55V	α33	α900	α850	α700	α580	α560	α550	α500	α450	α390	α380	α350	α330	α300	α290	α230	α200	α100	RX1R Mark II -	RX1	RX10	RX10 Mark II	RX10 Mark III -	RX10 Mark IV -	RX100 Mark II	HX400V -	HX60V					
Nissin Model																																																									
MG80 Pro <span>New</span>	—	—	●	—	●	●	—	●	●	●	—	●	●	●	○	—	—	*4	●	●	—	●	—	●	○	○	●	●	○	○	—	○	○	○	—	○	○	○	—	○	○	○	○	○	—	●	●	—	●	●	○	—	●				
Air 10s Commander	●	—	●	●	●	●	—	●	●	●	—	●	●	●	○	—	—	*4	●	●	—	●	—	●	○	○	●	●	○	○	—	○	○	○	○	—	○	○	○	—	○	○	○	○	○	—	●	●	—	●	●	○	—	●			
Air 1 Commander	● *4	● *4	●	—	● *4	● *4	●	● *4	● *4	●	● *4	—	●	●	○	● *1	●	*4	●	● *4	● *1	● *1	●	● *1	○	○	● *1	● *1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	—	●				
Di700 A	●	●	●	—	●	●	●	●	●	●	●	—	●	●	●	● *1	●	●	●	●	● *1	● *1	●	● *1	● *1	● *1	● *1	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
i60A	●	●	●	—	●	●	●	●	●	●	●	●	●	●	●	● *1	●	●	●	●	● *1	● *1	●	● *1	● *1	● *1	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	○	○	○	○	○	○	○	○	○	○	○	○	○	○				
i600	●	●	●	—	●	●	●	●	●	●	●	—	●	●	●	● *1	●	●	●	●	● *1	● *1	●	● *1	● *1	● *1	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
i40	●	●	●	—	●	●	●	●	●	●	●	—	●	●	●	● *1	●	●	●	●	● *1	● *1	●	● *1	● *1	● *1	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○			
i400	●	●	●	—	●	●	●	●	●	●	●	—	●	●	●	● *1	●	●	●	●	● *1	● *1	●	● *1	● *1	● *1	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	● *1	○	● *1	● *1	● *1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		
MF18	—	—	●	—	●	●	—	●	●	●	—	—	●	●	● *3	● *1	●	—	●	●	● *1	● *1	●	●	● *1	● *1	● *1	● *1	● *1	● *1	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

- Compatible Model
- incompatible Model
- No information available. To be confirmed.

- \*1 Use the Sony Shoe Adaptor (ADP-AMA)
- \*2 It slightly interferes (contacts) with the EVF. Since you can not use EVF, it can not be used because diopter correction does not work by interfering.
- \*3 Optical wireless function are not available.
- \*4 For using with those Sony camera models, not support the Air R's HSS High-speed sync function :: α9, α7R Mark III, α7R Mark II, α7S Mark II, α7 Mark III, α7 Mark II , α99 Mark II , α6500

		Nissin Flashes			Sony Flashes				
		i40 Sony	Di622 Mak II Sony	Di866 Mak II Sony	HVL-F32 M	HVL-F42 AM	HVL-F43 M	HVL-F58 AM	HVL-F60 M
Air R Receiver Sony *3		●	● *2	● *2	●	● *2	●	● *2	●

- Compatible Model
- GN Mode. 25-49
- GN Mode. 50-65
- \*1 Use the Sony Shoe Adaptor (ADP-AMA)
- \*2 Use the Sony Shoe Adaptor (ADP-MAA). Due to the design of the ADP-MAA adapter, bad contact may always occur when using ADP-MAA. Depends on the situtaion of use, the operation may be unstable.
- \*3 For using with those Sony camera models, the HSS High-speed sync function of the flash inserted on Air R can not be used, α9, α7R Mark III, α7R Mark II, α7S Mark II, α7 Mark III, α7 Mark II , α99 Mark II , α6500



Compatibility Chart

Last update: Aug 2020

Fujifilm Cameras																															
	GFX 50s	X-H1	X-T4	X-T3	X-T2	X-T1 / X-T1 GS	X-T20	X-T10	X-Pro2	X-Pro1	X-E3	X-E2S	X-E2	X-E1	X-M1	X-A5	X-A3	X-A2	X-A1	X100F	X100T	X100S	X100	X70	X30	X20	X10	X-S1	HS50EXR	HS30EXR	HS20EXR
Nissin Model																															
Air 10s Commander	—	●	●	●	● *1	● *1	●	●	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	—
Air 1 Commander	● *1 *2	●	●	●	● *1	● *1	●	●	● *1	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
Di700 A	● *1 *2	●	●	●	● *1	● *1	●	●	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i60A	● *1 *2	●	●	●	● *1	● *1	●	●	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i600	● *1 *2	●	●	●	● *1	● *1	●	●	● *1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i40	● *1 *2	●	●	●	● *1	● *1	●	●	● *1	●	●	●	●	●	●	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	○
i400	● *1 *2	●	●	●	● *1	● *1	●	●	● *1	●	●	●	●	●	●	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	○

- Compatible Model
- Incompatible Model
- This camera supports HSS/FP High speed synchronize function.

\*1 The Fujifilm camera is supporting of High speed synchronize function after camera firmware updated

\*2 Flash can be insert on the hot shoe of main body or that of EVF. When inserted a flash on the EVF shoe, do not tilt-up EVF since this may make the EVF damage.

<div><div>Nissin</div><div>DIGITAL</div></div>		Compatibility Chart																								Last update: Aug 2020				
Olympus Micro Four Thirds / Four Thirds Cameras																														
	E-M1 Mark II (OMD)	E-M1 (OMD)	E-M5 Mark II (OMD)	E-M5 (OMD)	E-M10 Mark III (OMD)	E-M10 Mark II (OMD)	E-M10 (OMD)	PEN-F	E-P5	E-P3	E-P2	E-P1	E-PL8 <div>New</div>	E-PL7	E-PL6	E-PL5	E-PL3	E-PL2	E-PL1	E-PM2	E-PM1	E-620	E-520	E-500	E-410	E-30				
Nissin Model																														
Air 10s Commander <div>New</div> <div>(Four Thirds ver.)</div>	●	●	●	●	●	—	●	—	●	●	●	●	●	—	●	●	—	●	●	●	●	—	—	—	—	—				
Air 1 Commander <div>(Four Thirds ver.)</div>	●	●	●	●	○	●	●	*1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
Di700 A <div>(Four Thirds ver.)</div>	●	●	*3	●	○	●	●	*1	●	●	●	●	●	●	●	●	●	●	●	●	●	*2	*2	*2	*2	*2				
i60A <div>(Four Thirds ver.)</div>	●	●	*1	●	○	●	●	*1	●	●	●	●	●	●	●	●	●	●	●	●	●	●	*2	*2	*2	*2				
i600 <div>(Four Thirds ver.)</div>	●	●	*1	●	○	●	●	*1	●	●	●	●	●	●	●	●	●	●	●	●	●	*2	*2	*2	*2	*2				
i40 <div>(Four Thirds ver.)</div>	● <div>*1</div>	●	*1	●	*4	●	●	*1	●	●	●	●	●	●	●	●	●	●	●	●	●	*2	*2	*2	*2	*2				
i400 <div>(Four Thirds ver.)</div>	● <div>*1</div>	●	*1	●	*4	●	●	*1	●	●	●	●	●	●	●	●	●	●	●	●	●	*2	*2	*2	*2	*2				
Di466 <div>(Four Thirds ver.)</div>	—	●	○	●	—	○	●	○	●	●	●	●	—	○	●	●	●	●	●	●	●	●	●	●	●	●				

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.
- \*1Unstable operation may appear when turn on the S-OVF Function ( Optical view finder simulation ) of EVF and shoot with EVF.
- \*2Flash's optical slave wireless mode is incompatible with camera's wireless flash system.
- \*3Di700A for FT version will be supporting Olympus E-M5 Mark II after flash firmware updated.
- \*4Hardware compatible on or above the following Serial Number: i40: 8A18XXXXXX~ i400:8927XXXXXX~

<div><div>Nissin</div><div>DIGITAL</div></div>																												Compatibility Chart												Last update: Aug 2020							
Panasonic Micro Four Thirds Cameras *4																																															
	GH5	GH4	GH3	GH2	GH1	GX8	GX7	GX7 Mark II / GX85 / GX80	GX1	G10	G9	G8 / G80 / G85	G7 / G70	G6	G5	G3	G2	G1	GF2	GF1	LX100	LX7	LX5	LX3		FZ200																					
Nissin Model																																															
Air 10s Commander (Four Thirds ver.) <div>New</div>	●	—	●	—	●	—	●	—	—	—	●	—	—	●	—	—	●	●	●	●	—	●	●	●	●	●																					
Air 1 Commander (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●																					
Di700 A (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●																					
i60A (Four Thirds ver.)	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●																					
i600 (Four Thirds ver.)	●	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●																					
i40 (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●																					
i400 (Four Thirds ver.)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●																					
Di466 (Four Thirds ver.)	—	●	●	●	●	○	●	○	●	●	—	—	○	●	●	●	●	●	●	●	●	●	●	●	●	●																					

- Compatible Model
- Incompatible Model
- No information available. To be confirmed.
- \*4According to the specifications of Panasonic Lumix series, the continuous shooting function cannot be used when an external flash is installed on the hot shoe.