




CABLE DISTANCE

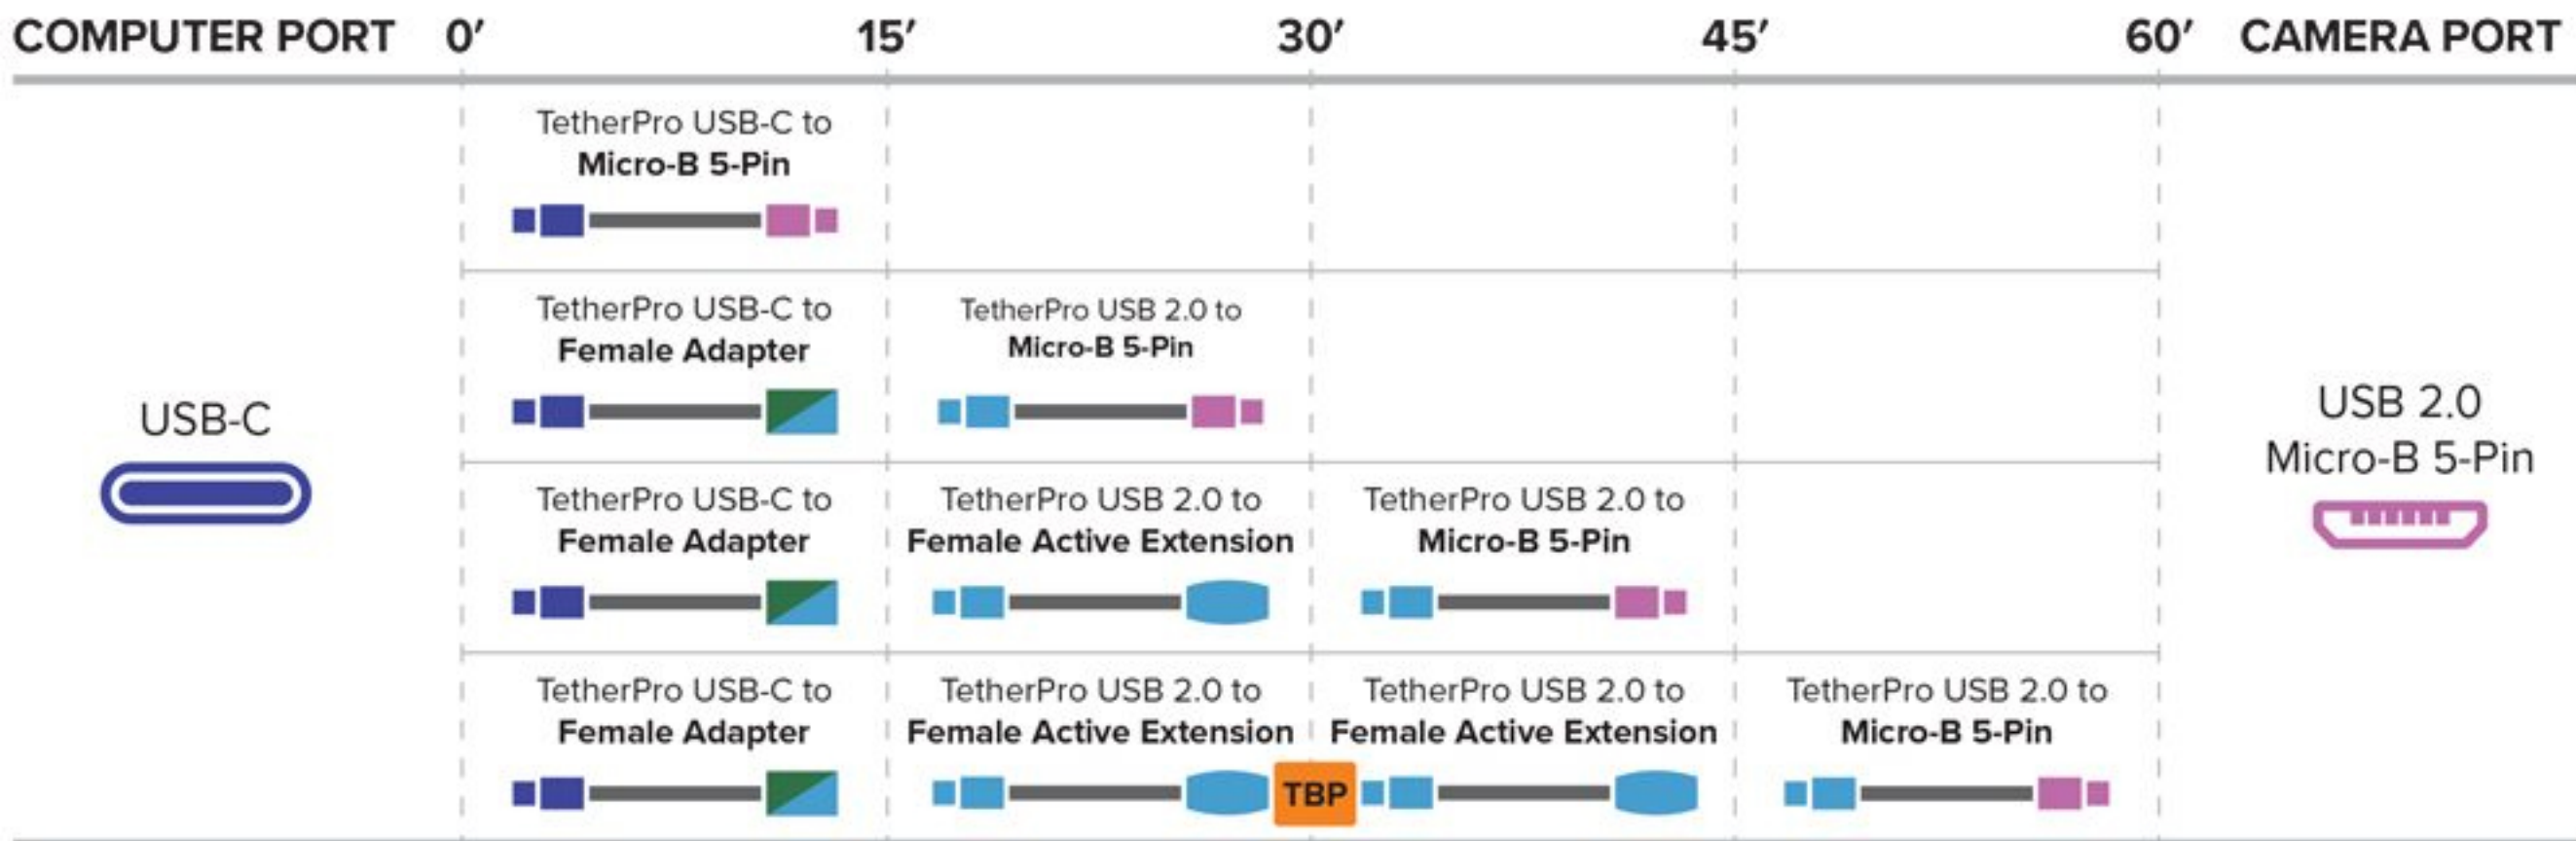

Compatibility:

Canon

[CANON EOS M5](#) [CANON EOS M6](#)

Fuji

[FUJI X-PRO2](#) [FUJI X-T1](#)

Nikon

[NIKON D3400](#) [NIKON D5600](#) [NIKON D7500](#)

Panasonic Lumix

[PANASONIC LUMIX DMC-FZ2500](#) [PANASONIC LUMIX DMC-G7](#)

[PANASONIC LUMIX DMC-G80](#) [PANASONIC LUMIX DMC-G85](#)

[PANASONIC LUMIX DMC-GX80](#) [PANASONIC LUMIX DMC-GX85](#)

[PANASONIC LUMIX DMC-LX10](#)

Pentax

[PENTAX K-1](#) [PENTAX K-1 MARK II](#) [PENTAX K-S1](#)

Sony

[SONY A5000](#) [SONY A5100](#) [SONY A58](#) [SONY A6000](#) [SONY A6300](#)

[SONY A6500](#) [SONY A68](#) [SONY A7](#) [SONY A7 II](#) [SONY A77 II](#) [SONY A7R](#)

[SONY A7R II](#) [SONY A7S](#) [SONY A7S II](#) [SONY A9](#) [SONY A99 MARK II](#)

[SONY CYBER-SHOT DSC-RX1R II](#) [SONY DSC-RX10 IV](#) [SONY DSC-RX100M4](#)

[SONY DSC-RX100M5](#) [SONY DSC-RX10M2](#) [SONY DSC-RX10M3](#) [SONY DSC-RX1RM2](#)

[SONY NEX-3N](#) [SONY NEX-5T](#) [SONY NEX-6](#) [SONY NEX-F3](#) [SONY RX10 II](#)

[SONY RX10 III](#) [SONY RX100 III](#) [SONY RX100 IV](#) [SONY RX100 IV](#)

Note: Some cameras may not support tethering. Please check your camera's instruction manual. If tethering is not supported, this cable will allow for image transfer only.